

NAVGUARD/EE 777S INSTRUCTION

1. ARMING

Make sure all the windows and doors are closed and **do not move** in the area to be armed, then press #1 key on the KEYFOB to arm the system, you will hear one “Beep” sound and at the same time, the armed status indicator (LED) display will flash.

2. DISARMING

Press #1 on the KEYFOB before you enter the door, when you hear “Beep Beep”, you will see the armed status indicator (LED) display turn off.

3. PANIC

Press #1 on the KEYFOB for three seconds, the siren will be activated and the signal will be transmitted to central station. If you want to turn off the alarm, press #1 on the KEYFOB again (twice).

4. BYPASS

- a. Before arming the system, “press & hold” button #2 of the KEYFOB.
- b. “Trigger” or “Walking-through” the protected area that you would like to by-pass. Make sure the LED on the PIR is flashing and you hear two “beeps” from the siren.
- c. After the “by-pass” function is engaged, you can arm the system by the normal procedure (same method could BYPASS the doors or windows that are protected).
- d. Disarm the system, all the functions will return to the normal condition.

5. TROUBLE NOTIFICATION

- a. After arming the alarm system, you will hear continuous “Beep~~~”, which indicates there is some trouble in the alarm system. Such problems may be caused by open windows, open doors or some Passive Infrared Motion loop malfunction, and you need to notify the alarm company to arrange for service.
- b. The alarm system will give “Beep, Beep ~~~~”malfunction alert signal if AC power is off. Please check the AC power switch and circuit breaker, adapter plug of the alarm system or if your area has a power outage. The alarm system will be back to normal automatically if AC power is restored.

6. FORCE ARMING

After arming the alarm system, around 20 seconds later, if you hear the alarm horn or receive the notification from the central station, which zone is open or a device or a sensor has trouble, you need to notify the alarm company to arrange for service. Also the alarm system can still work through the auto bypass / force arm function.

7. KEYPAD FUNCTION

Press & hold “0”for 2 seconds, and then enter you personal use code and press “#”, the alarm system will be armed or disarmed.

8. CHANGE USE CODE

Press & hold “0”for 2 seconds, enter your current use code first, and then press “*”then enter your new use code, and press “*” again, your new use code will then have been set.

E & E 24 hours Business Phone:
Central Station 24 hours Phone:

(626) 452-8988
(800) 482-9800

EE / EE777SIN REV 03/04

巡航者 (NAVGUARD/EE777S) 使用說明:

1. 開啟警鈴

關好所有門窗，不要在室內走動，按一下遙控開關 (KEYFOB) 的 # 1 鍵，聽到 “B” /----聲同時會看到 LED 掃描指示器來回閃動,即表示警鈴系統已開啟。

2. 關閉警鈴

在進門之前按一下遙控開關 (KEYFOB) 的 # 1 鍵，聽到 “B.B” /兩聲同時看到 LED 掃描指示器來回閃動時,即表示警鈴系統已關閉。

3. 緊急報警 (PANIC)

按住遙控開關 (KEYFOB) 的 # 1 鍵兩三秒以上,警鈴會大響,並且信號會傳送到電腦中心。如要停止警鈴，按遙控開關 (KEYFOB) 的 # 1 鍵兩次即可。

4. 選擇使用 (BYPASS)

- 在未開啟警鈴的狀態下，按住 KEYFOB #2 鍵不要鬆手。
- “觸發”或“走過”所要的“BYPASS”/取消的紅外線感應器前，確認紅外線感應器上的紅色 LED 燈亮並聽到 “B.B” /兩聲,即完成了 “BYPASS” 的設定, (如法可以 “BYPASS” 門窗感應器，先將要 BYPASS 的門或窗打開，再按住 #2 鍵即可)。
- 在完成這一功能設定後，此時可依正常操作開啟警鈴系統。
- 關閉警鈴系統後，所有功能將自動恢復正常狀態。

5. 故障警示

- 當開啟警鈴系統之後，馬上聽到 “Bip ~~” 的連續叫聲，即表現系統有故障，可能是門窗沒有完全關好或者是紅外感應器的線路有故障，需通知保全公司。
- 當外接電源系統中斷時 (停電時)，警鈴系統將會發出 “Bip Bip ~~” 連續的故障叫聲，此時需檢查電源開關，警鈴變壓器插頭等是否正常，或是否地區停電所致，當電源恢復後，故障自動排除。

6. 強制開啟功能

當開啟警鈴系統之後，在 20 秒之內，馬上聽到警報开始大声或同时接到電腦中心的通報，即表示某一區域的門或窗沒有關好，也有可能是某路或感應器有故障，需通知保全公司安排檢查及修理。警報系統還是會正常工作，只是將有故障之區域強制 “BAYPASS”。

7. 數碼鍵盤使用方法:

按下並保持 “0” 鍵盤不要鬆手，在依次按下自己的密碼，最後按一下 “#” 鍵，即可開或關警鈴系統。

8. 變換密碼

按下並保持 “0” 鍵盤不要鬆手，按舊密碼，再按 “*” 鍵盤，按新密碼 (任何組合)，最後再按一次 “*” 即完成。

雙 E 保全服務電話 (24Hrs) : (626) 452-8988
電腦中心 24 小時電話: (800) 482-9800