

Summary of Audible/Visual Notifications

Fixed-Word Display Keypads

| SOUND | CAUSE | DISPLAY |
|---|--|---|
| LOUD, INTERRUPTED* Keypad & Ext. | FIRE ALARM | FIRE is displayed; zone number of zone in alarm is displayed. If a fire alarm is manually activated, zone number 95 will be displayed. |
| LOUD, CONTINUOUS* Keypad & Ext. | BURGLARY/AUDIBLE EMERGENCY ALARM | ALARM is displayed. Zone number of zone in alarm is also displayed. |
| ONE SHORT BEEP (not repeated) Keypad only | a. SYSTEM DISARM b. SYSTEM ARMING ATTEMPT WITH AN OPEN ZONE. c. BYPASS VERIFY | a. READY indicator light comes on. b. Number of the open protection zone displayed. c. Zone numbers of the bypassed protection zones are displayed (one beep is heard for each zone displayed). Subsequently, BYPASS is displayed. |
| ONE SHORT BEEP (once every 40 secs) Keypad only | a. SYSTEM IS IN TEST MODE b. LOW BATTERY AT A TRANSMITTER | a. Opened zone numbers will appear. b. BAT displayed with zone number of transmitter. |
| TWO SHORT BEEPS Keypad only | ARM AWAY or MAXIMUM | AWAY is displayed. Red ARMED indicator is lit. |
| THREE SHORT BEEPS Keypad only | a. ARM STAY, NIGHT-STAY, OR INSTANT b. ZONE OPENED WITH SYSTEM IN CHIME MODE. | a. STAY or INSTANT is displayed. Red ARMED indicator is lit. b. CHIME displayed; zone number of open protection zone will be displayed if the [★] key is pressed. |
| RAPID BEEPING Keypad only | a. TROUBLE b. MEMORY OF ALARM c. SYSTEM LOW BATTERY d. EXT. SOUNDER WIRING FAIL | a. CHECK displayed. Zone number of troubled protection zone is displayed. b. FIRE or ALARM is displayed; zone number of zone in alarm is displayed c. BAT displayed with no zone ID number. d. CHECK 70 is displayed. |
| SLOW BEEPING Keypad only | a. EXIT DELAY WARNING b. ENTRY DELAY WARNING | a. AWAY is displayed. b. Exceeding the entry delay time without disarming causes alarm. |

* If a bell is used as external sounder, fire alarm is *pulsed ring*; burglary/audible emergency is *steady ring*.

Summary of Audible/Visual Notifications

Alpha Display Keypads

| SOUND | CAUSE | DISPLAY |
|---|--|--|
| LOUD, INTERRUPTED* Keypad & Ext. | FIRE ALARM. | FIRE is displayed; descriptor of zone in alarm is displayed. If a fire alarm is manually activated, zone number 95 will be displayed. |
| LOUD, CONTINUOUS* Keypad & Ext. | BURGLARY/AUDIBLE EMERGENCY ALARM. | ALARM is displayed. If programmed, descriptor of zone in alarm is also displayed |
| ONE SHORT BEEP (not repeated) Keypad only | a. SYSTEM DISARM. b. SYSTEM ARMING ATTEMPT WITH AN OPEN ZONE. c. BYPASS VERIFY. | a. DISARMED/READY TO ARM is displayed. b. Number and descriptor of open protection zone is displayed. c. Numbers and descriptors of the bypassed zones are displayed (One beep is heard for each zone displayed). Subsequently, the following is displayed: DISARMED BYPASS /Ready to Arm. |
| ONE SHORT BEEP (once every 40 secs) Keypad only | a. SYSTEM IS IN TEST MODE. b. LOW BATTERY AT A TRANSMITTER. | a. Opened Zone identifications will appear. b. LO BAT displayed with description of transmitter. |
| TWO SHORT BEEPS Keypad only | ARM AWAY or MAXIMUM. | ARMED AWAY or MAXIMUM displayed. Red ARMED indicator lit. |
| THREE SHORT BEEPS Keypad only | a. ARM STAY, NIGHT-STAY, OR INSTANT. b. ZONE OPENED WHILE SYSTEM IS DISARMED. | a. ARMED STAY or ARMED INSTANT displayed. Red ARMED indicator lit. b. CHIME displayed, descriptor of open protection zone will be displayed if the [*] key is pressed. |
| RAPID BEEPING Keypad only | a. TROUBLE. b. MEMORY OF ALARM. c. SYSTEM LOW BATTERY. d. EXT. SOUNDER WIRE FAIL. | a. CHECK displayed. Descriptor of troubled protection zone is displayed. b. FIRE or ALARM is displayed; descriptor of zone in alarm is displayed. c. SYSTEM LO BAT displayed. d. BELL FAILURE is displayed. |
| SLOW BEEPING Keypad only | a. EXIT DELAY WARNING (if programmed). b. ENTRY DELAY WARNING. | a. ARMED AWAY OR MAXIMUM is displayed along with You May Exit Now. b. DISARM SYSTEM OR ALARM WILL OCCUR is displayed. Exceeding the delay time without disarming causes an alarm. |

* If a bell is used as external sounder, fire alarm is *pulsed ring*; burglary/audible emergency is *steady ring*.